

Armaplate



StrongArm

Made In UK

Patent Pending AP999

Thank you for choosing Armaplate UK to prevent the theft of your vehicle. Your business is very much appreciated. All our products are designed and manufactured right here in the UK. The AP999 is designed to protect you from opportunist theft-attacks by presenting a strong, steel barrier which completely disables the steering wheel.

One of the biggest benefits of the StrongArm is that it is **permanently** fixed to the bulkhead of the vehicle, ready for deployment. It's all very quick and simple and there's no excuse not to use it each time the vehicle is left unattended.

The StrongArm uses a single mounting-point on the bulkhead. On most vehicles, the unit is fitted to the side of the driver's seat near the door "A" and is allowed to hang down, where it meets up with a Storage Bracket. On some vehicles the unit is fitted on the other side of the driver's seat "B", or even horizontally "C".

Start by attaching the Swivel Bracket to the top of the StrongArm **TEMPORARILY** using the supplied M8 bolt.

With the top of the StrongArm sitting against the bulkhead (**approximately** as per the image), extend the device so that the lower section passes *through* the steering wheel with enough overhang to prevent it being removed and lock at that length with the bullet-lock.

Now that you have the ideal length, mark the bulkhead to indicate where it needs an 10mm hole drilling for the **M10** mounting bolt. Before drilling, check in the rear of the van to make sure nothing is going to be hit by the drill-bit. If you have any racking in the back, you may need to remove part of it to gain enough access to tighten the security nut on the mounting bolt.

After you've drilled the hole, pass the M10 mounting bolt through the Swivel Bracket, slide on the M10 Nylon Washer, followed by a large black washer and then pass the bolt through the bulkhead. You'll need a second person to assist you in the back of the van - get them to fit the second large black steel washer and tighten the M10 Nyloc nut.




Note, you should only tighten the nut and bolt to the point where it starts to bite against the bulkhead - you want the bracket to be able to swivel but not be loose.

You should then fix the top of the StrongArm to the bracket using the supplied M8x60mm bolt and the nylon washers.


Tighten the ShearNut until it shears and then **damage the threads** using a pair of pliers to make sure it cannot be undone.

Now mark the bulkhead where the **Storage Bracket** will be fixed and secure it with the supplied M4 nuts and bolts. Always store the StrongArm securely when driving.


If you have any queries regarding installation, please call us on 0845 838 0700 and one of our engineers will assist you.

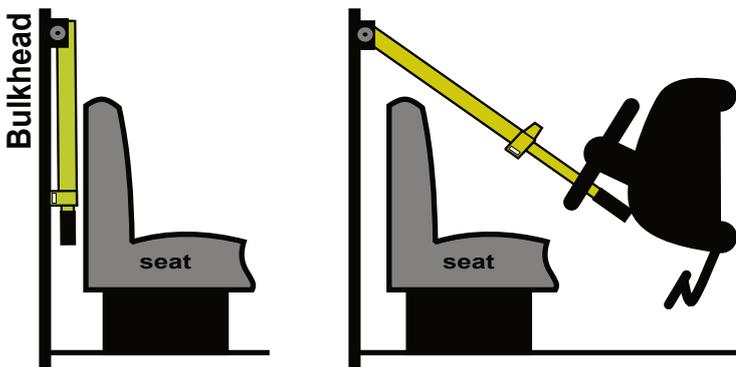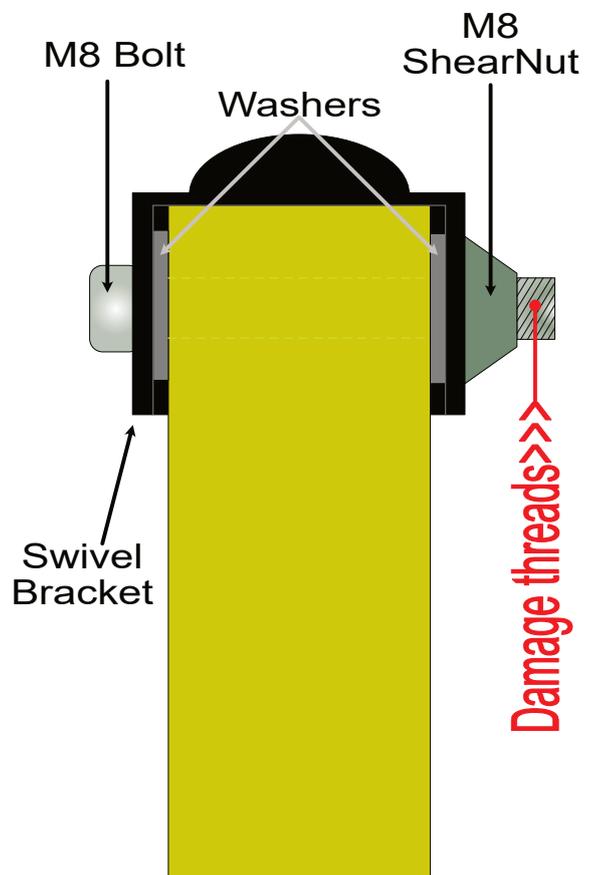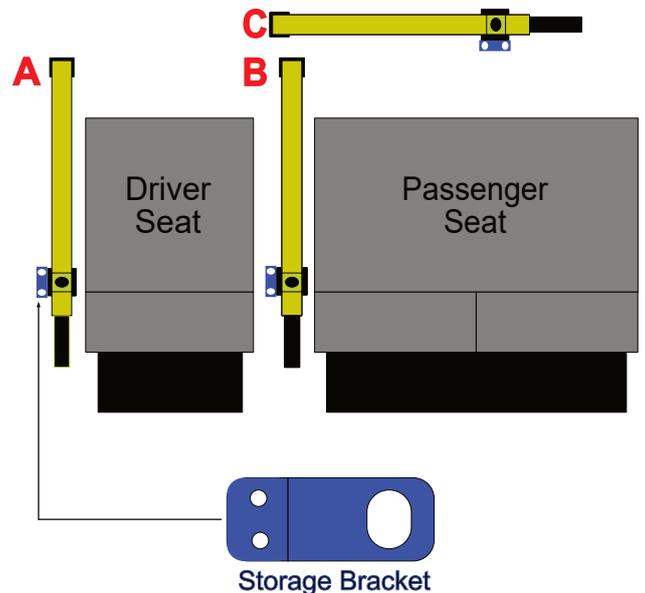

Bulkhead

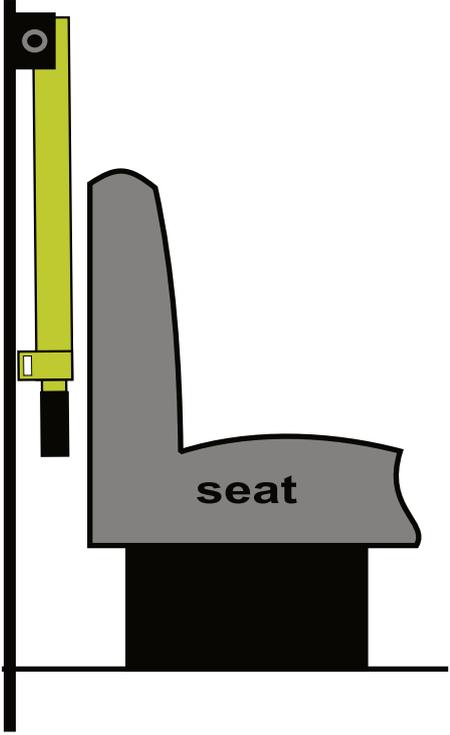

seat

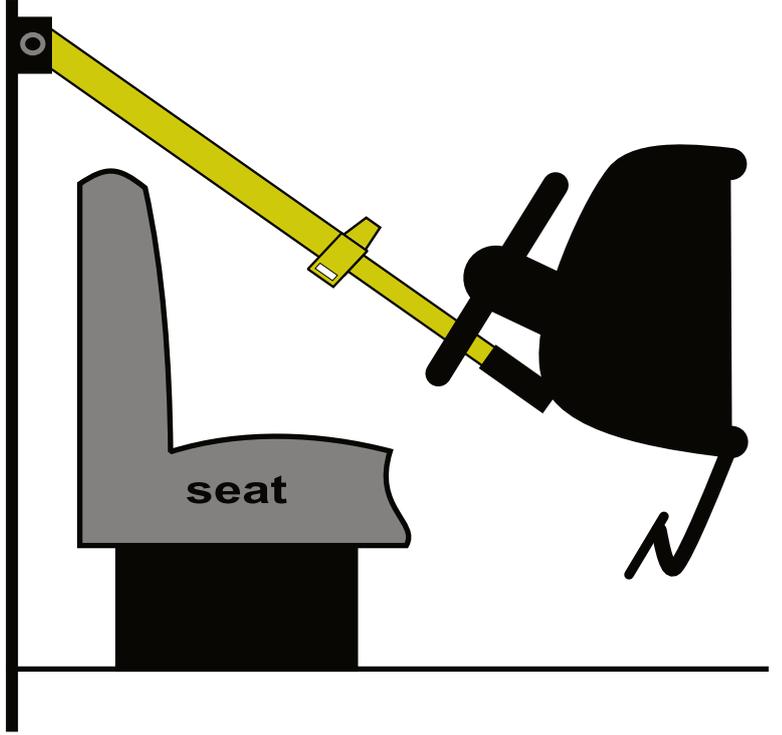

seat